LED DRIVING LIGHT INSTALLATION INSTRUCTIONS

Preliminary-Steps

- 1.Read all instructions carefully and study diagrams before installing lights.
- 2. Check with state and local authorities for laws governing usage and proper mounting of auxiliary lamps.
- 3. Disconnect ground connection from battery (marked "-") to avoid accidental short circuits before attempting to connect electrical wires.
- 4. Route new wires along existing wiring Tape as necessary to correct slack.
- 5. When running wires through the firewall, keep them away from moving parts.

Mounting Lights


- 1.Drill 10.5mm holes for screw placement on the surface where you would like to fix the light.
- 2.Use the bolt to fasten the lamp, add the locking washer and tighten the bolt.



- 1. Mount switch in a convenient location where it is easily reached from the driver's seat.
- 2. Wiring: Red "+", black "-". Attach the Red wire with annular terminal to positive side "+", and the black wire with annular terminal to negative side "-" on battery or ground. (Vehicles)
- 3. Make sure the working voltage (DC12V/24V), choose the corresponding relays. (DC12V/24V)
- 4.Insert the lamp connector (A) to wring connector (B)
- 5.Turn on the switch to make sure if the lamp works. If not, please check carefully if the wiring installing correct.

Warning:

- 1. Work under the specified voltage (DC9-36V)
- 2. This light becomes hot under continuous use. Don't remove or touch the casing for at least 30 minutes after turning the lamp off.
- 3. Keep heat-sink clean and exposed to maintain air flow.

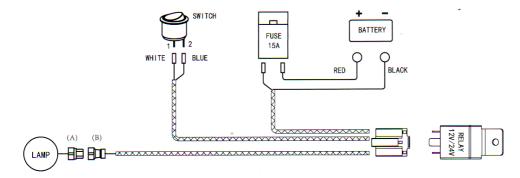

Wiring Diagrams for driving light with Parking Lamp:

